
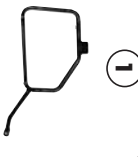



PL441 - KL441

KAWASAKI ZZR1200 02/03

PORTAVALIGIE LATERALE SPECIFICO - SPECIFIC TUBULAR SIDE-CASE HOLDER
 PORTE-VALISES LAT RAUX SP CIRQUE - SPEZIFISCHES STAHLROHR-SEITENTRÄGER
 PORTA-EQUIPALE LATERAL ESPEC FICO
 ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

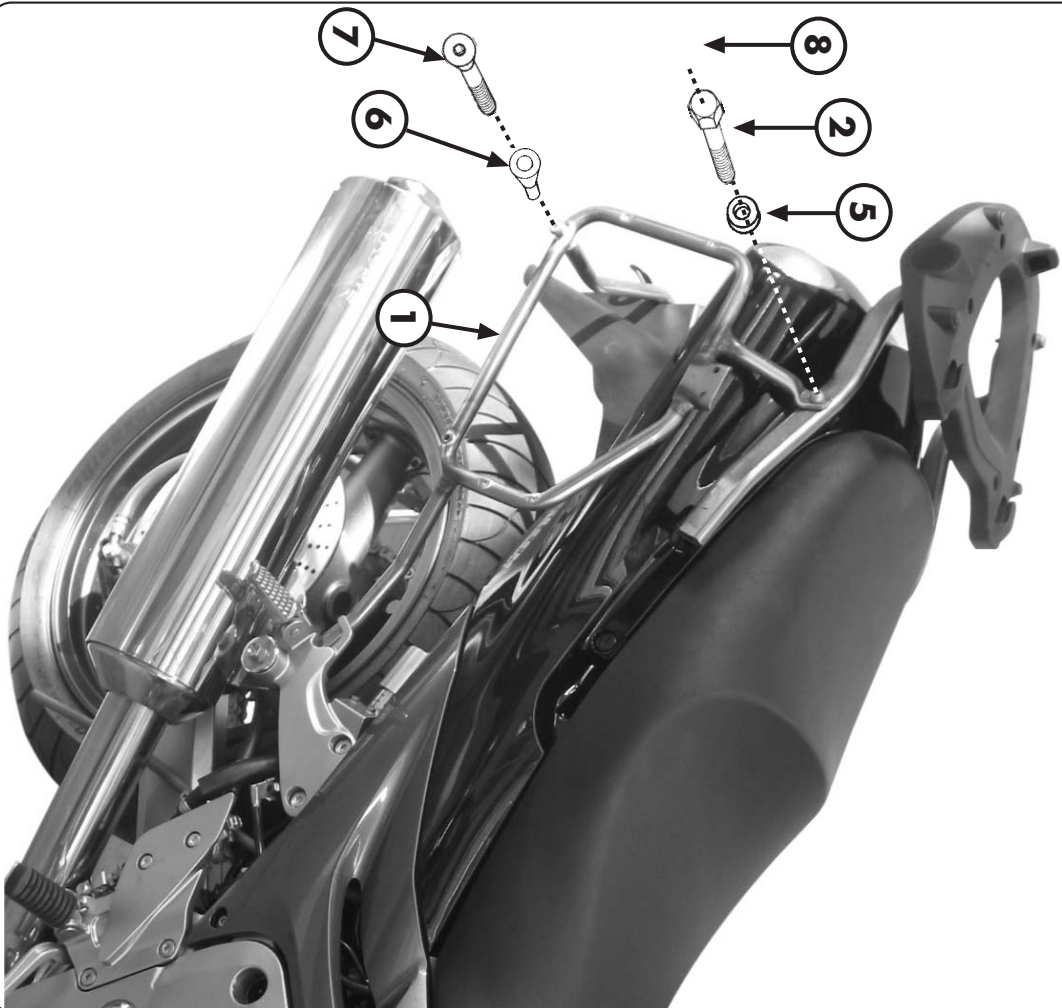

Q.TY n.2 dx-xx



VITE TE M8X20
 SCHRIV M8X20
 SCHRAUBE M8X20
 ORIGINAL M8X20

Q.TY n.2



PONTE POSTERIORE
 REAR BRIDGE
 BRUCKE
 POSTERIEURE
 PUENTE POSTERIOR

Q.TY n.1



DADO ORIGINALE
 ORIGINAL NUT
 ORIGINAL MUTTER
 TUERCA ORIGINAL

Q.TY n.-



RONDELLA 18X14
 WASHER 18X14
 RONDELLE 18X14
 SCHEIBE 18X14
 ARANDELA 18X14

Q.TY n.2



FUNGHETTO
 SIDE SUPPORT
 CREAMPILION
 LÄGER
 BRIDA

Q.TY n.2




CORRIVITE
 SCREW CAP
 CAGHE VIS
 STOPFSCHRAUBE

Q.TY n.2



VITE 15CEI M6X40
 SCHRIV M6X40
 VIS M6X40
 SCHRAUBE M6X40
 ORIGINAL M6X40

Q.TY n.2

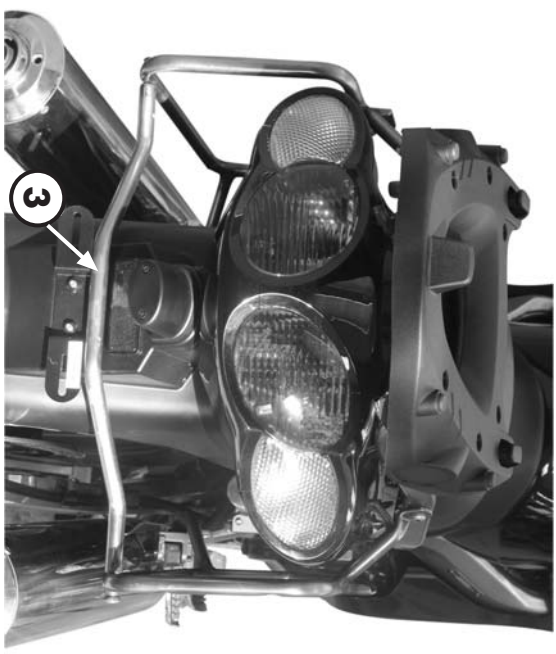

PRIMA di montare i portavaligia laterali necessario aver **gi** montato il portavaligia centrale
Before mounting the tubular side-case holder it is **necessary** to mount the top case carrier
Avant de monter les supports valises il est **necessaire** de monter le porte paquet central
Bevor Sie die Seitenträger montieren, muß der Topcase Träger montiert werden
Montar el portamaleas central **ANTES** de montar los portamaleas laterales



Copyright 04092006-Rev03, 1/1